# **RMO-G Series**

## **Micro Ohmmeters**





## **RMO-G Series**

Micro Ohmímetros

- Lightweight from 8 to 11,5 kg /17.6 lbs to 25.4 lbs
- Powerful from 0 to 800 A DC
- Measuring range 0 999,9 m $\Omega$  (up to 6  $\Omega$ )
- Best resolution 0,1  $\mu\Omega$  (0,01  $\mu\Omega$  with "HP" module)
- Typical accuracy ± (0,1 % rdg + 0,1 % FS)
- Remote Control Unit (optional)
- Both Sides Grounded Unit (optional)
- A built-in High Precision module (optional)
- SINGLE / CONTIN / BSG / DTRtest modes



## Description

RMO-G series of Micro Ohmmeters (hereafter referred to as "RMO-G") contain 7 models: **RMO100G**, **RMO200G**, **RMO300G**, **RMO400G**, **RMO500G**, **RMO600** and **RMO800G**.

All RMO-G models are based on a state of the art technology, using the most advanced switch mode technique available today. The main difference between these models is the maximum test current that can be generated (100 A for RMO100G, 200 A for RMO200G, ..., 600 A for RMO600G, up to 800 A for RMO800G model).

RMO-G generates a true DC ripple-free current with automatically regulated test ramps. During a test the RMO-G ramps with increasing current before measuring and decreasing current after the measurement. This eliminates magnetic transients.

The RMO-G instrument can store internally up to 500 measurements. All measurements are time and date stamped. Using the DV-Win soft-ware a test can be performed from a PC and the results can be obtained directly on the PC.

Communication between the RMO-G and a PC is through an USB (as standard) or an RS232 cable (as an option). Using the DV-Win the result can be arranged as an Excel spread-sheet which can be later shown as a diagram and printed for a report.

The set is equipped with a thermal and an overcurrent protection. The RMO-G has a very high ability to cancel electrostatic and electro-magnetic interference in HV electric fields. It is achieved by very efficient filtration. The filtration is made utilizing a proprietary hardware and software.


The RMO-G instrument has four separate test modes:

- SINGLE mode
- CONTIN mode
- BSG mode (Both Sides Grounded)
- DTRtest mode (Dead Tank Resistance)

### Single Test

The RMO-G instrument generates a filtered (true ripplefree) DC current and output it in an automatically regulated current ramp. By sloping the current up and down, magnetic transients are virtually eliminated.

Below is an example of single test ramp for the 100 A current.

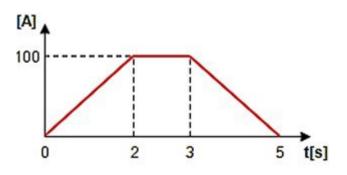

## **Continuous Test**

RMO-G can generate DC current continuously in predefined test durations, as presented in the table below.

Test current (A)	Maximum duration	Rest time (min)
Up to 100 A	Continuous	0
200 A	150 s	2,5 min
300 A	90 or 150 s	3 or 15 min
400 A	50 s	2,5 min
500 A	30 s	2 min
600 A	20 s	2 min
800 A	*5 s	1 min

#### Continuous Test

\*in standard version CONTIN mode is available up to 600 A, but it can be available for 800 A (5 s) as per request

To prevent overheating, certain duty cycles apply depending on the test current being used.

#### BSG test

Grounding circuit breakers from both sides provides increased safety for testing personnel comparing with only one side grounding method.

This test mode is specially designed for Both Sides Grounded testing. A special current clamp meter supplied from the instrument is used for measuring the current through the groundings. The test setup is very simple (same as for the SINGLE test) and all calculations are made automatically by the device internal algorithm.

#### DTRtest

Presence of current transformers (CT) on the dead tank circuit breakers may introduce errors during contact resistance measurement due to CT magnetizing process. For this reason, it is necessary to saturate a CT prior to measurement.

DTRtest menu is specially designed for resistance measurement of the dead tank circuit breakers. All calculations for detecting the saturated condition of CTs are done by internal algorithm. Accordingly, the process of measurement parameters setting and testing in this mode is very simple and does not differ much from live tank circuit breaker testing (in SINGLE / CONTIN test modes).

### High – Precision module (optional)

The high-precision module is newly developed optional built-in addition to our RMO-G micro ohmmeters. It provides an increased precision and offers a highly accurate contact resistance measurement: ± (0,1 % rdg + 0,1 % FS) accuracy at range from 0,01  $\mu\Omega$  to 99,99  $\mu\Omega$ , with 0,01  $\mu\Omega$  resolution.

RMO-G devices with the built-in High Precision Module may be used for applications on very small resistance measurements of non-inductive test objects. This requirement is usually met at resistance inspections of generator circuit breakers, welding joints, GIS testing, etc.

## Aplication

Typical application is measuring resistance of noninductive test objects:

- High, middle and low voltage circuit breakers (live and dead tank)
- High, middle and low voltage disconnecting switches
- Gas Isolated Switchgears (GIS)
- High-current bus bar joints
- Cable splices
- Welding joints
- Fuses

## Connecting the Test Object to RMO-G


The connection diagram of the RMO-G devices corresponds to the Kelvin's (four point) measurement principle. The measuring cables from the "Voltage Sense" sockets are attached as close as possible to Rx, and in between the current feeding cables. That way, a resistance of both cables and clamps is almost completely excluded from the resistance measurement.



RMO-G cable connection on live tank circuit breaker



The connecting diagrams for the live tank and dead tank circuit breakers are presented in the following two figures:

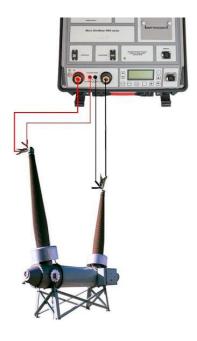


RMO-G cable connection on dead tank circuit breaker

## **Remote Control Unit**

The RMO Remote Control Unit is an optional control unit that is used to start and stop the tests from a remote location, away from the actual RMO-G.

Provided that, for a series of tests, the same test current is fed through the test object, multiple measurements can be carried out with the RMO Remote Control Unit.

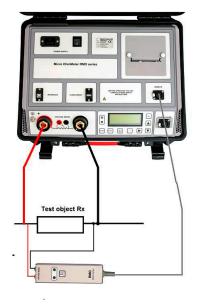

- Jotal current generated from the RMO
- ---> Current through circuit breaker
- ----> Current through groundings

Using the RMO-G with a current clamp-meter is an additional safety feature. Measurement of a circuit breaker contact resistance is done with both sides of the breaker grounded.

The RMO-G device will measure the current through the ground circuit connection and add this value to the selected test current value in order to provide the selected test current through the test object.

## Connecting RMO-G to a Both Sides Grounded Circuit Breaker

Using RMO-G with both sides grounded option it is possible to make safer measurement of breakers with both terminals of the breaker grounded.

## Beneficios y características

The main benefits and features of RMO-G devices are listed below:

• Very high output power (output voltage multiplied with output current) enables two main advantages:

1. Wide resistance measurement range even when very high currents are used.

e.g. RMO600G can test up to 5,3 m $\Omega$  with 600 A test current when 5 m / 50 mm² current cables are used.

2. Use of thinner/longer test cables, depending of the customer requirement.

e.g. RMO100G can use 20 m current cables with cross-section of only 16 mm2 for testing circuit breakers with 100 A test current.

- The output current is filtered and has a ripple of less than 1 %.
- The instrument has a very high typical accuracy ± (0,1 % rdg + 0,1 % FS).

 The best resolution of RMO-G is 0,1 μΩ at 999,9 μΩ range as standard. Optionally, the 0,01 μΩ resolution can be provided at 99,99 μΩ range (upon request or in case of built-in High Precision module).

Several advanced features are available as standard/ optional accessories:

- Rmax feature pass/fail criteria
- Built-in thermal printer (optional)
- USB or RS232 communication port
- Bluetooth communication (optional)
- DTRtest mode a special mode for Dead Tank circuit breakers testing
- A built-in High Precision module (available as option) – provides an increased precision and offers a highly accurate contact resistance measurement in the range from 1  $\mu\Omega$  to 30  $\mu\Omega$ , with 0,01  $\mu\Omega$  resolution.

## DV-Win software

DV-Win software provides acquisition and analysis of the test results, as well as control of all the RMO-G functions from a PC. The DV-Win also provides several advanced features as a supplement to multiple functions of RMO-G devices. Testing in Continuous mode is upgraded with a sample time feature which allows user to record test results in specific time intervals set in seconds.

After performed measurements results can be saved in a various formats and test report can be generated and saved or printed. Result can also be downloaded from the device to the PC by use of several different search filters.

For the RMO-G form of DV-Win software there is Help menu available, with detailed instructions and explanations of all functions and features.

## **DV-Win Main Features**

- Full control of the device in test
- Test reports \*available in several formats
- Several filters for results download to PC
- Test plans
- Sampling time feature for CONTIN mode

e Edit Tools		
Transmission and a		
t Info Test settings Download		
Test settings		
Operation mode	Test parameters	
<ul> <li>Single</li> <li>Continuous</li> <li>BSG</li> <li>DTRtest</li> </ul>	Test current     Test duration     Sample time       50     A     10     s     1     > s       Use standard parameters     Image: standard parameters     Image: standard parameters     Image: standard parameters	
	Measuring object Define measuring element Breaks per phase Breaking unit 1   A - Current Path	
Test controls	START STOP	
nory Date	*     *     2     /3     /%     *       RMO Test Results     Open	SAP CEVERS, REFORMEN SAP CEVERS, REFORMEN Logic Browne Company, DV Power Address Context
	Memory         Date           45         3225070           44         5322111           45         5322111           46         5322111           166         3132011           166         3132011           166         3132011           166         3132011           176	Paper sectore       Paper sectore
	106         1152013         Mais         Mais         System Folder           106         3152013         Plctwiss         System Folder           108         3152013         Velace         System Folder           109         3152013         Velace         EAAND           109         3152013         Velace         EAAND           110         3152013         Velace         EAAND           110         3152013         Velace         EAAND           110         3152013         Velace         EAAND	- Close report

## Technical data

#### Mains power supply

- Connection according to IEC/EN60320-1; C320
- Mains supply: 90 V 264 V AC
- Frequency: 50 / 60 Hz
- Power consumption

Model	@ 230 V CA	@ 115 V CA
RMO100G	1190 VA	1130 VA
RMO200G	1815 VA	1810 VA
RMO300G	2400 VA	2115 VA
RMO400G	3570 VA	2710 VA
RMO500G	3970 VA	3920 VA
RMO600G	4720 VA	4145 VA
RMO800G	5010 VA	3510 VA
Fuse:	Type F	
/O100A & RMO200A	12 A / 250 V	

RMO100A & RMO200A	12 A / 250 V
RMO300A & RMO400A	15 A / 250 V
RMO500A & RMO600A	20 A / 250 V
RMO800G	20 A / 250 V

#### **Output data**

.

• Test current ranges and load intervals:

Model	Test current**	Test duration
RMO100G	100 A	Unlimited
RMO200G	200 A	150 s
RMO300G	300 A	150 s
RMO400G	400 A	60 s <i>@300 A</i>
RMO500G	500 A	30 s
RMO600G	600 A	20 s
RMO800G	800 A	*5 s

\*in standard version CONTIN mode is available up to 600 A, but it can be available for 800 A (5 s) as per request

\*\*Courant d'essai sélectionnable par pas de 1 A (sur demande)

• Full Load Voltages at maximum current

Modelo	@ 230 V CA	@ 115 V CA
RMO100G	7,15 V	6,80 V
RMO200G	6,80 V	5,90 V
RMO300G	6,00 V	4,80 V
RMO400G	6,70 V	4,40 V
RMO500G	5,95 V	5,10 V
RMO600G	5,90 V	3,80 V
RMO800G	4,70 V	2,85 V

#### Medición

- Resistance range:
   0 999,9 mΩ\* for RMO100 600G, \*expandable up to 6 Ω
   0 499,9 mΩ for RMO800G
- Resolution

(0,1 μΩ - 99,99 μΩ *optional resolution at this range	0,01 μΩ)*
0,1 μΩ – 999,9 μΩ	0,1 μΩ
1,000 mΩ - 9,999 mΩ	1 μΩ
10,00 mΩ - 99,99 mΩ	10 μΩ

100,0 mΩ - 999,9 mΩ	0,1 mΩ
*1,000 Ω – 6,000 Ω	1 mΩ

• Typical accuracy ± (0,1 % rdg + 0,1 % FS)

#### Display

- LCD screen 20 characters by 4 lines
- LCD display with backlight, visible in bright sunlight.

#### Interface

- RMO-G is equipped with an USB port
- optional: RS232 (connection to an external computer)
- optional: Bluetooth communication interface

#### **Test Result Storage**

• RMO-G can store up to 500 measurements

#### **Printer (optional)**

- Thermal printer
- Paper width 80 mm / 3.2 in

#### **Dimensions and weight**

Model	Dimensions (WxHxD) mm / in	Weight
RMO100G		8 kg / 17.6 lbs
RMO200G	405 x 165 x 330 mm	8 kg / 17.6 lbs
RMO300G	7.8 x 10 x 15 in *RMO 100G/200G/300G/400G /500G in version without	8 kg / 17.6 lbs
RMO400G	built-in thermal printer	9 kg / 20 lbs
RMO500G		9 kg / 20 lbs
RMO600G	480 x 190 x 385 mm 18.9 x 7.48 x 15.16 in	11 kg / 24.3 lbs
RMO8006	*RMO600G/RMO800G and all RMO-Gs in version with built-in thermal printer	11,5 kg / 25,4 lbs

#### **Environmental protection**

• Ingress protection rating: IP67 \*with closed lid

#### **Environmental conditions**

- Operating temperature:
   -20 °C +55 °C / -4 °F +131 °F
- Storage & transportation:
   -40 °C +70 °C / -40 °F +158 °F
- Relative humidity 5% 95%, non-condensing
- Altitude: up to 2000 m

#### **Applicable Standards**

- Installation/overvoltage: category II
- Pollution: degree 2
- Low Voltage Directive: 2014/35/EU (CE conform), EN 61010-1
- EMC Directive 2014/30/EU (CE conform) (former 2004/108/EC) Applicable standard: IEC/EN 61326-1
- CAN/CSA-C22.2 No.61010-1, 2nd edition, including Amendment 1


#### Warranty

• 3 years

All specifications herein are valid at ambient temperature of + 25  $^\circ C$  and recommended accessories.

Specifications are subject to change without notice.

## Accesories

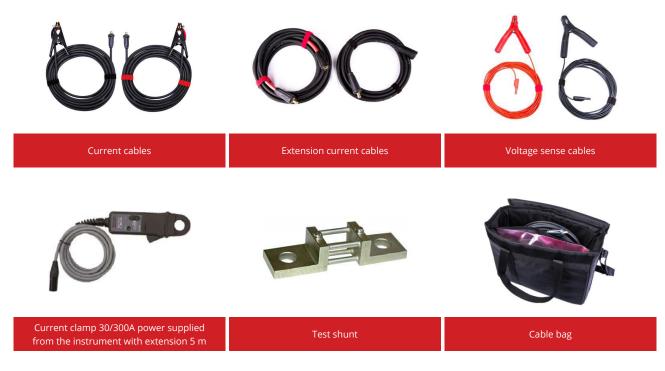

\* Besides battery clamps, current cables are also available with C clamps or with alligator clamps (as option)

\*\* Besides isolated alligator (A2) clamps, sense cables are also available with semi-isolated alligator (A1) clamps or with TTA clamps (as option)

#### Recommended cross-sections for RMO-G models:

CROSS SECTION/ LENGHT	16 mm <sup>2</sup>	25 mm²	35 mm²	*50 mm <sup>2</sup>	*70 mm <sup>2</sup>	*95 mm <sup>2</sup>
5 m	RMO100A	RMO200A	RMO300A & RMO400A	RMO500A & RMO600A	-	*RMO800G
10 m	RMO100A	RMO200A	RMO300A & RMO400A	RMO500A & RMO600A	-	*RMO800G
15 m	-	RMO100A	RMO200A	RMO300A & RMO400A	RMO500A & RMO600A	-

\*RMO800G device can use cables with 50, 70 or 95 mm<sup>2</sup> cross-section, depending of the required resistance measurement range at 800 A test current..

## Order info

Instrument with included accessories	Article No.
	RMO100G-N-00
	RMO200G-N-00
Micro Ohmmeter RMO-G	RMO300G-N-00
- DV-Win PC software including USB cable - Mains power cable	RMO400G-N-00
- Ground (PE) cable	RMO500G-N-00
	RMO600G-N-00
	RMO800G-N-00

Recommended accessories	Article No.
Current cables 2 x 5 m, *XX mm2 with battery clips	C2-05-XXYMBY**
Sense cables 2 x 5 m with alligator clips	S2-05-02BPA2
Transport case *RMO100G/200G/300G/400G/500G in version without built-in thermal printer	HARD-CASE-SC
Cable bag	CABLE-BAG-00

Optional accessories	Article No.
Transport case *RMO100G/200G/300G/400G/500G in version without built-in thermal printer	HARD-CASE-SC
Transport case *RMO600G/RMO800G and all RMO-Gs in version with built-in thermal printer	HARD-CASE-LC
Cable plastic case – medium size	SCABLE-CAS-02
Test shunt 100 μΩ (600 A/60 mV)	SHUNT-600-MK
Current cables 2 x 10 m, *XX mm <sup>2</sup> with battery clips	C2-10-XXYMBY**
Current cables 2 x 15 m, *XX mm <sup>2</sup> with battery clips	C2-15-XXYMBY**
Current extension cable 2 x 10 m, *XX mm <sup>2</sup>	E2-10-XXYMYF
Sense cables, extension 2 x 10 m	E2-10-02BPBP
Sense cables 2 x 10 m with alligator clips	S2-10-02BPA2
Sense cables 2 x 15 m with alligator clips	S2-15-02BPA2
Built-in thermal printer	PRINT-080-00
High Precision Module (built-in)	RMO-HPMM-DG0
Remote control unit	RMORCU-09-00
Remote control test probes (one with trig button)	RMO-RCTP-TB0
Current clamp 30/300 A power supplied from the instrument with extension 5 m (Both Sides Grounded Unit)	CACL-0300-06

\*XX – Cross-section of current cables varies, depending of the ouput power of the model. \*\*YMBY – For RMO100G and RMO200G without built-in thermal printer: YMBY=LMB1; For RMO100G and RMO200G with built-in thermal printer and for other models: YMBY=VMB3

e.g.: For RMO200G without built-in thermal printer, the article number for current cables 10 m/25 mm<sup>2</sup> cross-section is C2-10-25LMB1 For RMO600G, the article number for current cables 5m/50 mm2 is C2-05-50VMB3.

**Amperis Products S.L.** 

Barbeito Maria 14, 27003, Lugo, Spain T (+34) 982 20 99 20 | F (+34) 982 20 99 info@amperis.com



www.amperis.com

PROYECTO COFINANCIADO POR EL IGAPE, XUNTA DE GALICIA Y FONDO EUROPEO DE DESARROLLO **REGIONAL DEL PROGRAMA OPERATIVO 2014-2020** 





Fondo Europeo de Desenvolvemento Rexional "Unha maneira de facer Europa"





